



# Sony NWZ-E473 Battery Replacement

This is a guide showing you how to replace the battery.

Written By: Matthew Hintz



## INTRODUCTION

To complete this guide, a soldering iron will be needed. You may want to have someone with soldering iron experience complete that step or watch some basic videos on how to use a soldering iron.


---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Tweezers](#) (1)
  - [Soldering Station](#) (1)
-

## Step 1 — Initial screw removal

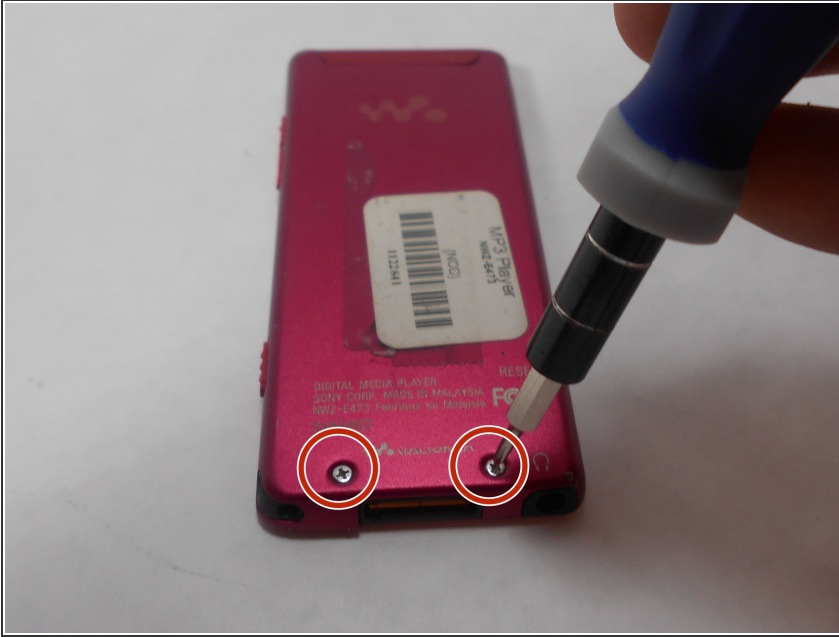

- Unscrew two 5 mm Phillips #00 screws using a Phillips #00 screwdriver located on the bottom of the back of the device.

## Step 2 — Using a prying tool, loosen bottom portion of device.



- Using a plastic opening tool, loosen the bottom portion of device.



### Step 3 — Using prying tool, loosen top panel of the device.



- Using a plastic opening tool, loosen the top panel of the device.

### Step 4 — Remove screws from portion under top panel of the device.




- Remove two 3 mm Philips #00 screws using a Phillips #00 screwdriver located on the portion under the top panel of the device.

## Step 5 — Remove back plate from device.



- Remove back plate from device.



## Step 6 — Battery

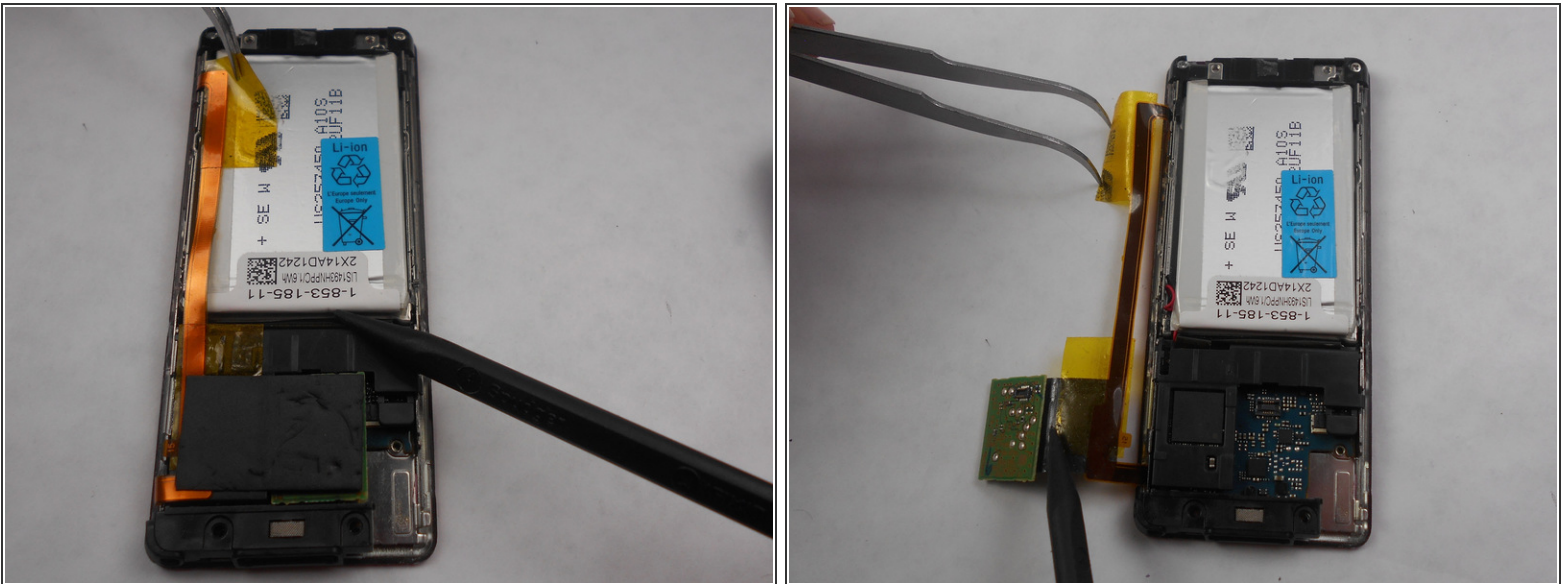

- Peel back layer of tape.
- Remove processor located below tape and down from the battery using tweezers and spudger.




## Step 7

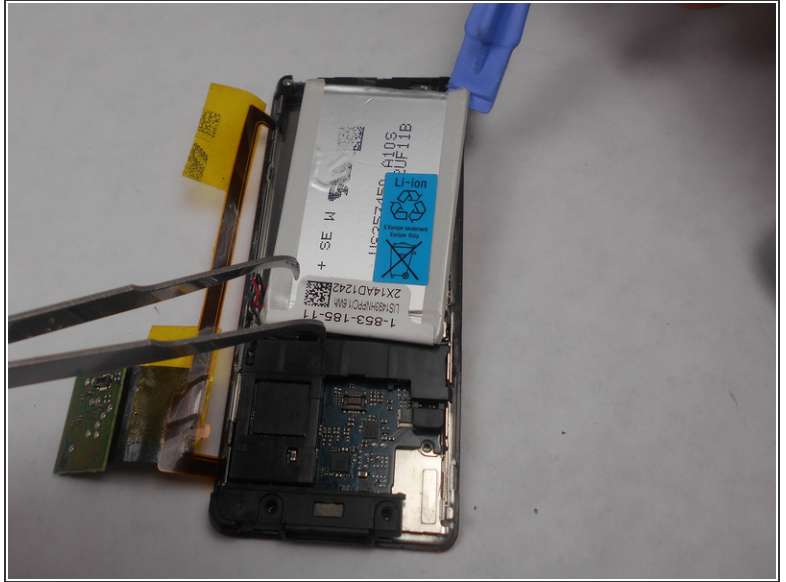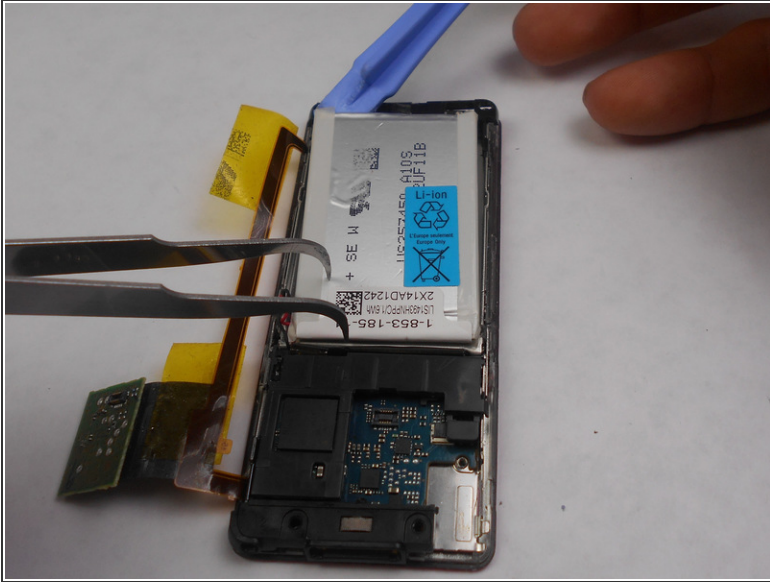


- Using a prying tool, slide tool under the top portion of the battery.

## Step 8

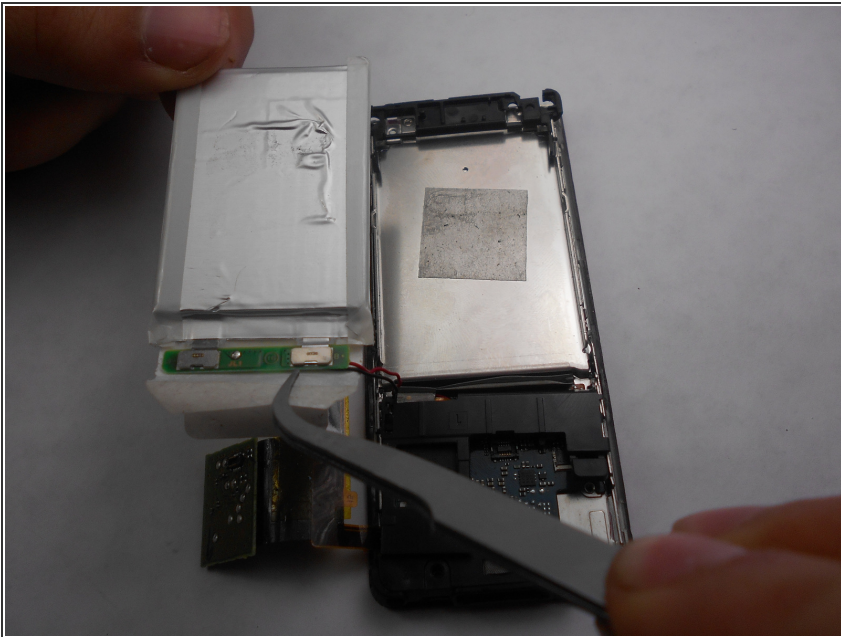

- Remove sticker from battery connection.

## Step 9

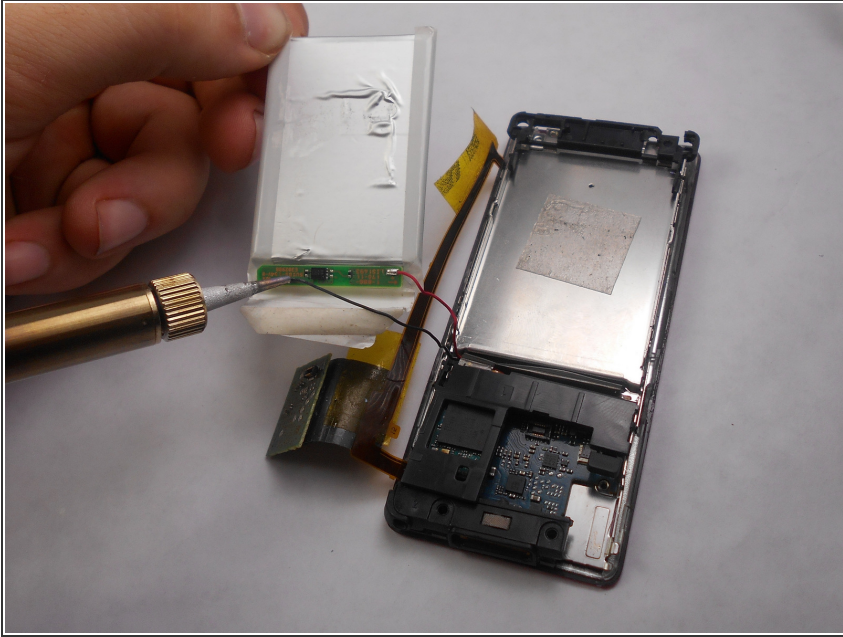

- Use a soldering iron to remove wires from both red and black terminals.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-09 05:53:11 AM.